




 
 
 
 




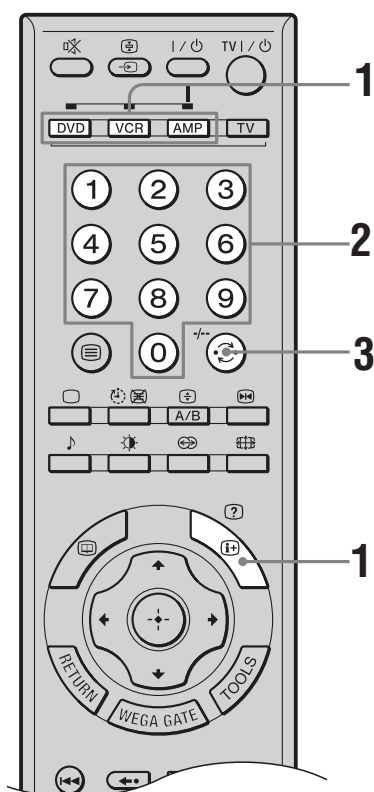
To connect	Do this
Digital satellite receiver or digital terrestrial receiver <b>E</b>	Connect only to the HDMI IN jack. The digital video and audio signals are input from the digital satellite receiver.  <b>Tip</b> If the digital satellite receiver has an HDMI jack, connecting via an HDMI cable will provide the best results.  <b>Note</b> When using an HDMI-to-DVI cable or an adapter, be sure to connect the DVI output connector first; then connect to the HDMI jack on the TV.
DVD recorder or VCR <b>F</b>	Connect to the video output jacks  to record the image from the TV. Connect to the audio output jacks  to record the sound from the TV on the DVD recorder or VCR. To turn off the sound of the TV speakers, set "Speaker" to "Off" (page 37).
DVD player with component output <b>G</b>	Connect to the component jack  1, 2 and the audio jacks  1, 2. For better picture quality, component connection is recommended if your DVD player has a component output.
Video game equipment, DVD player without component video output, or VCR <b>H I</b>	Connect to the S video jack  1 or the video jack  1, 2 or 3, and the audio jacks  1, 2 or 3. To avoid picture noise, do not connect the camcorder to the video jack  1 and the S video jack  1 at the same time. If you connect mono equipment, connect to the L (MONO) jack  1, 2 or 3.
Hi-Fi audio equipment <b>J</b>	Connect to the audio output jacks  to listen to the sound from the TV on the Hi-Fi audio equipment. To turn off the sound of the TV speakers, set "Speaker" to "Off" (page 37).

 
 

## Programming the remote

If you have Sony VCRs/DVDs and Sony DVD Home Theater Systems/Amplifiers, do the following procedure to program the remote so that you can operate them using this remote.

### Note

Before you start, look up the three-digit code for your equipment on the right. For equipment that has more than one code, try with the first code number.



- 1 Press and hold the DVD, VCR, or AMP function button you want to program on the remote and press the  button simultaneously.  
The selected function button (DVD, VCR, or AMP) will flash.
- 2 Enter the three-digit code using the number buttons while the function button is lit (for approximately 10 seconds).
- 3 Press  or  to complete the programming.  
When the programming is done successfully, the selected function button will flash twice slowly, and if not, will flash five times quickly.

## To check if the code works

Aim the remote to the equipment, then press **I/⏻**. If the equipment responds, the programming is completed. If not, try the next code listed.

## Equipment's codes

Equipment	Code
VCR	001*, 002, 003, 004
DVD	101*, 151, 201, 202, 203
Amplifier	301, 302, 303, 304, 401*, 402, 403, 451

\* Factory setting

## To set the remote to restore operation of the TV automatically

In the factory setting, the remote is set to operate a piece of equipment selected by one of the function buttons. The remote operates the equipment until another function button is pressed.

You can set the remote to operate the TV automatically if the remote has not been used to operate the other equipment for 30 seconds.

You can select either setting by the following operation.  
Holding TV **I/⏻** down, press **↖** and **PROG-** simultaneously.

When the remote returns to operate the TV, the TV button will light up.

When the remote is set to operate a different piece of equipment, all four function buttons will light up simultaneously.

## Using other equipment with the remote

To operate other connected equipment, first program the necessary code.

### Note

Some functions cannot be operated with the TV's remote depending on the equipment. In that case, use the remote supplied with the equipment.

## To operate a VCR

To	Press
activate the remote to operate VCR the VCR	
turn on/off	<b>I/⏻</b>
change channels	<b>PROG+/-</b> , number buttons, <b>↻ /-/--</b> (using tuner)

To	Press
record	<b>REC ●</b>
stop recording	<b>■</b>
pause recording	<b>  </b> (press again to resume recording)
play	<b>▷</b>
stop	<b>■</b>
fast forward	<b>▶▶</b>
rewind the tape	<b>◀◀</b>
pause	<b>  </b> (press again to resume normal playback)
search the picture forward or backward	<b>▶▶</b> or <b>◀◀</b> during playback (release to resume normal playback)
select another input signal connected to the input	<b>→/Ⓜ</b>

## To operate a DVD player

To	Press
activate the remote to operate DVD the DVD	
turn on/off	<b>I/⏻</b>
play	<b>▷</b>
stop	<b>■</b>
pause	<b>  </b> (press again to resume normal playback)
step through different tracks of the disc	<b>◀◀</b> to fast reverse, or <b>▶▶</b> to fast forward the disc during playback
step through different chapters of the disc	<b>▶▶▶</b> to step forward, or <b>◀◀◀</b> to step backward
select a track directly	0-9, <b>↻ /-/--</b>
display the top menu	<b>DVD TOP MENU</b>
display the disc menu	<b>DVD MENU</b>
operate the DVD menu	<b>↑ ↓ ← →, ⊕</b>
select the SYSTEM MENU	<b>WEGA GATE</b>

## To operate a 5.1ch DVD AV System (DAV)

To	Press
activate the remote to operate DVD the DVD	
turn on/off	<b>I/⏻</b>
display the top menu	<b>DVD TOP MENU</b>

To	Press
display the disc menu	DVD MENU
play	
stop	
pause	(press again to resume normal playback)
search the picture forward or backward	or  during playback
specify the previous chapter/track	
specify the next chapter/track	
move highlight (cursor), and select	,
change volume	
select another input signal connected to the input	

### To operate a DVD/VCR combo unit

To	Press
activate the remote to operate DVD or VCR the DVD or VCR	
turn on/off	
display the top menu (DVD)	DVD TOP MENU
display the disc menu (DVD)	DVD MENU
play	
stop	
pause	(press again to resume normal playback)
search the picture forward or backward	or  during playback
replay (DVD)	
advance (DVD)	
move highlight (cursor), and select (DVD)	,
Record (VCR)	REC
stop recording (VCR)	
pause recording (VCR)	(press again to resume recording)
change channels (VCR)	PROG+/-, 0-9,  /-/- (using tuner)
adjust tracking (VCR)	PROG+/- (during tape playback)
select another input signal connected to the input	

### To operate an HDD/DVD combo unit

To	Press
activate the remote to operate DVD the HDD/DVD	
turn on/off	
select the HDD	F1
select the DVD	F2
play	
stop	
pause	(press again to resume normal playback)
search the picture forward or backward	or  during playback
replay (DVD)	
advance (DVD)	
move highlight (cursor), and select	,
specify the previous chapter/track	
specify the next chapter/track	
Record	REC
stop recording	REC STOP
pause recording	REC PAUSE  (press again to resume recording)
display the top menu (DVD)	DVD TOP MENU
display the disc menu (DVD)	DVD MENU
select the SYSTEM MENU	WEGA GATE
search a scene from the chapter list	VISUAL SEARCH
select another input signal connected to the input	

### To operate an AV Receiver/amplifier

To	Press
activate the remote to operate AMP the amplifier	
turn on/off	
master volume	
select other input connected to the AV receiver/amplifier	