


SECTION 6 DISASSEMBLY, EXPLODED VIEWS AND OTHER PARTS

6-1. KDL-32EX720, 32EX723

6-1-1. Disassembly, Exploded View

- Remove screws before disassembly.
 - Unplug connectors before disassembly.
- Details of Screws and Connectors are at Section 6-1-2.




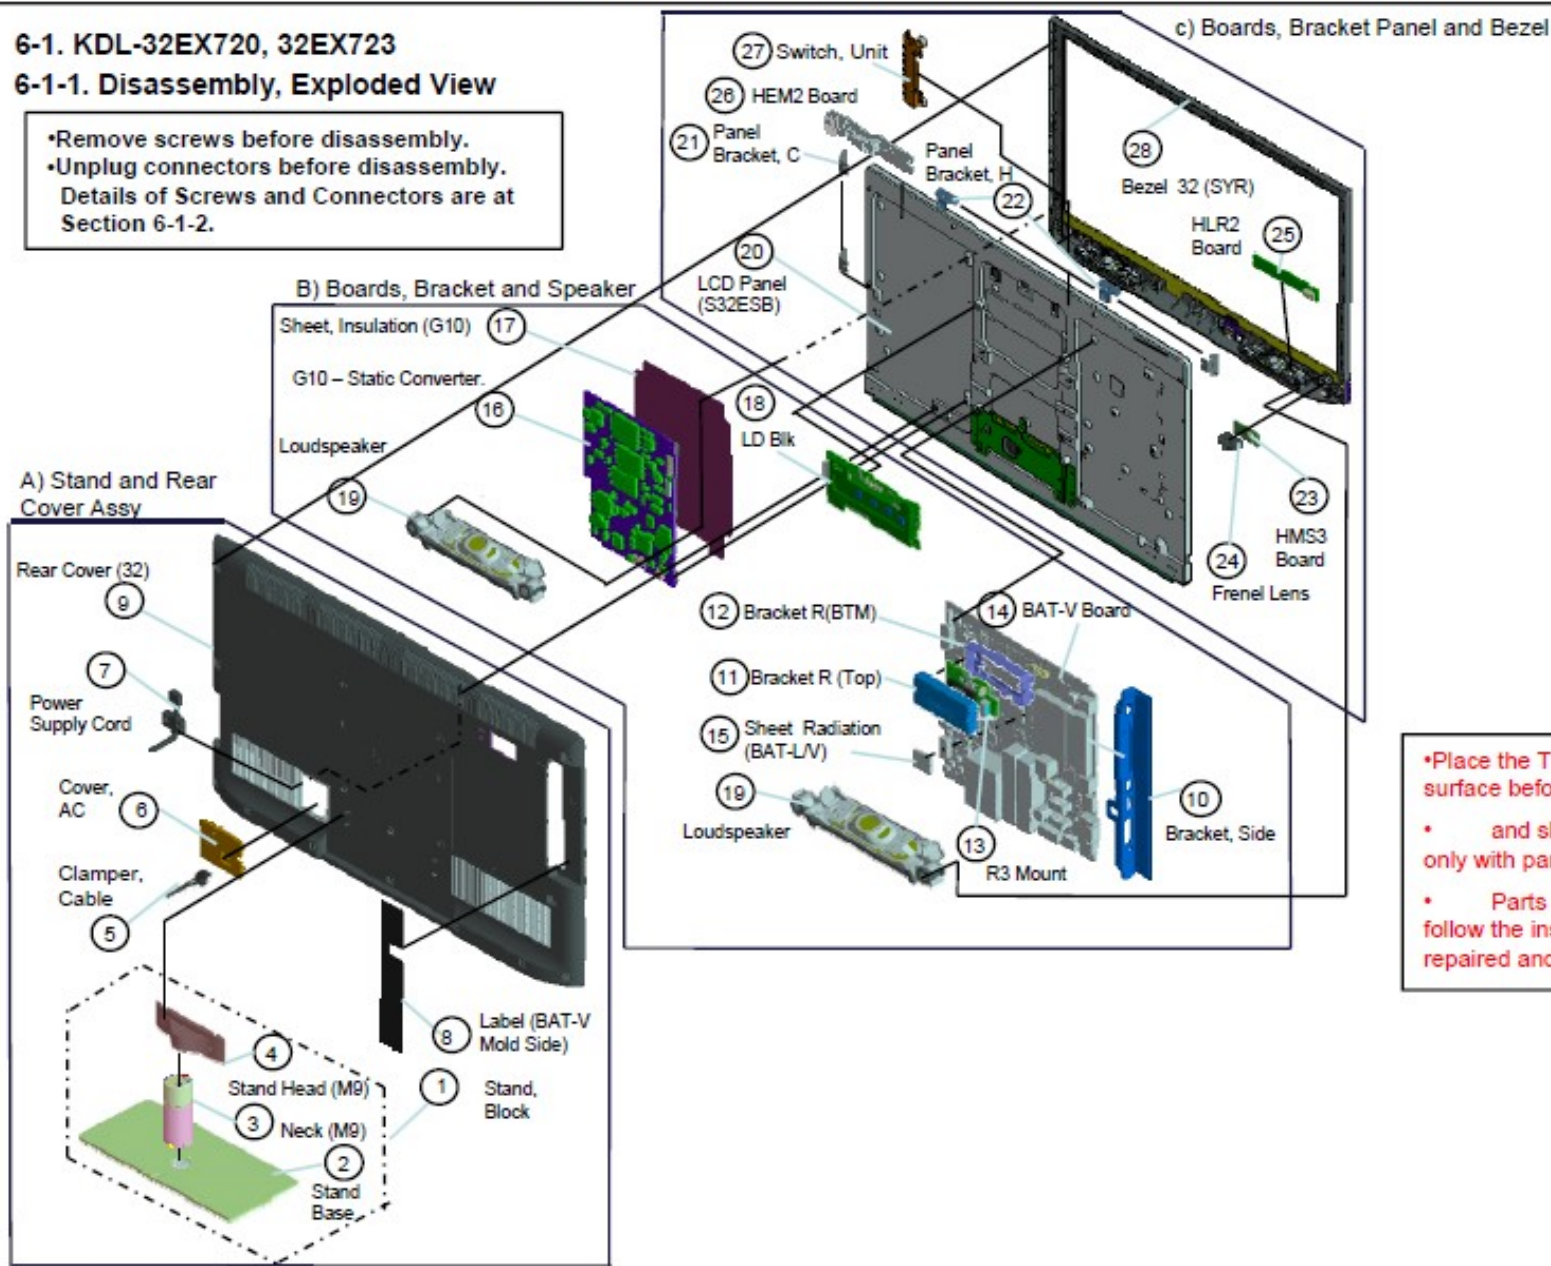


- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
- and shaded parts are critical for safety. Replace only with part number specified.
- Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

6-1. KDL-32EX720, 32EX723

6-1-2. Screws & Connectors Layout

Ref P	art No	Description
□	2-580-639-01	SCREW, +BVTP 4X12 TYPE2 IT-3
■	7-685-648-79	SCREW, +BVTP 3X12 TYPE2 IT-3
△	4-256-393-01	SCREW +PSW M3X6 W12
●	2-990-421-41	SCREW, (+PSW) (M3X6)
☆	4-259-541-01	USER SCREW ST
◇	4-268-126-02	SCREW, ORNAMENTAL M6X12
◆	4-257-907-01	JOINT STAND

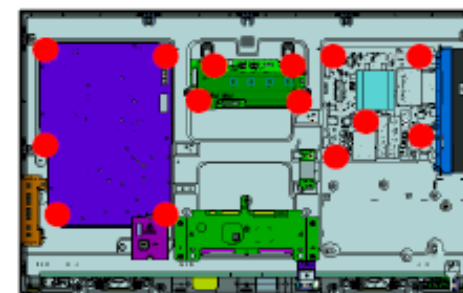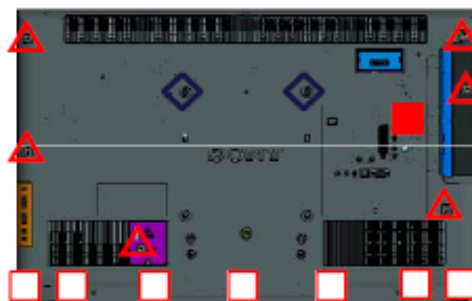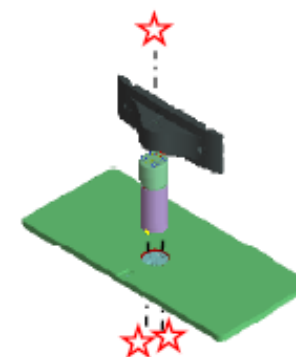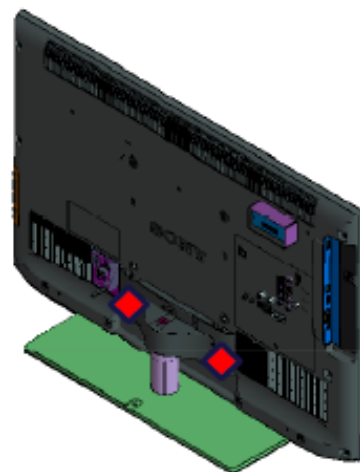

Ref P	art No	Description
51	* 1-910-800-99	CONNECTOR ASSY 14P CN6705 (G10) - CN1002 (BLK) (1))
52	* 1-910-801-02	CONNECTOR ASSY 28P CN6001 (BAT-V) - CN6002 (BAT-V) - CN6704 (G10) (1))
53	* 1-910-802-00	CONNECTOR ASSY 6P CN9005 (BAT-V) - CN001 (R3/RU) (1))
54	* 1-910-801-40	FLEXIBLE FLAT CABLE 56 PIN CN11 (T-CON) - CN11 (LD) (1))
55	* 1-838-866-11	FLEXIBLE FLAT CABLE N4 32S CN2001 (BAT-V)-PANEL (1))
56	* 1-910-801-06	HARNESS ASSY (CN9006 (BAT-V) - CN100 (HLR2) - HMS3 - HEM2 - SW / CN4601 (BAT-V) - SP (1))

