

Programming the remote

This remote is preset to operate Sony TVs, and most Sony Blu-ray disc players, DVD players, DVD/HDD recorders, and audio systems (Home Theatre, etc.).

To control such Sony Blu-ray disc players, DVD players, and DVD/HDD recorders, programme the remote as follows.



- Before you start, look up the three-digit code of your equipment from the “Manufacturer’s codes”

- 1 Press and hold the **BD**, **DVD**, or **AMP** function button you want to programme on the remote, then press .

The selected function button (**BD**, **DVD**, or **AMP**) flashes.

- 2 Press the number buttons to enter the three-digit manufacturer’s code number when the function button flashes.

If you do not enter the code within 10 seconds, you need to go back to step 1.

- 3 Press .

The selected function button flashes twice.

If the selected function button flashes five times, repeat from step 1.

- 4 Turn on your equipment and check that the following main functions work.

For Blu-ray disc players, DVD players and DVD/HDD recorders, check:

(playback), (stop), (rewind), (fast forward), channel selection.

For DVD players and DVD/HDD recorders, check:


TOP MENU/MENU and .

If your equipment is not working, or some of the functions do not work

Enter the correct code or try the next code listed for the brand. Note that the list may not include codes for all models of all brands.

To return to normal TV operation

Press the **TV** function button.

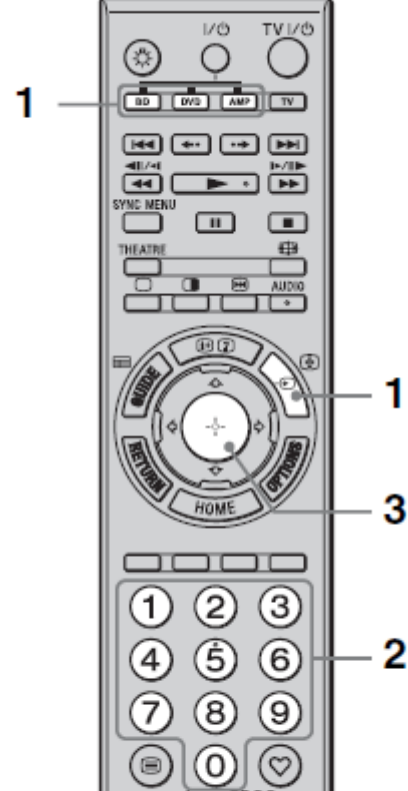

Manufacturer’s codes

DVD players

Manufacturer	Code
SONY	001, 029, 030, 036 – 044, 053 – 055

Blu-ray disc (BD) players

Manufacturer	Code
SONY	101 – 103

DVD players/video cassette players

Manufacturer	Code
SONY	251

DVD/HDD recorders

Manufacturer	Code
SONY	201 – 203

VCRs

Manufacturer	Code
SONY	301 – 310, 362

DAV Home Theatre System

Manufacturer	Code
SONY (DAV)	401 – 404

AV receivers

Manufacturer	Code
SONY	451 – 454

Digital terrestrial receivers

Manufacturer	Code
SONY	501 – 503