


# LED Downlight Installation Instructions and Warranty

- MUST BE INSTALLED BY A QUALIFIED ELECTRICAL CONTRACTOR.**
- Must be installed to Australian Standards AS/NZS3000.
- Ensure mains power is off before commencing any installations.
- This product is NOT suitable for damp or explosive environments.
- The installing electrical contractor must perform a risk assessment of the ceiling space before carrying out any installation.
- For Back to Base warranty purposes it is recommended that a Clipsal 413 Surface Socket or equivalent be installed for each downlight in the ceiling space.
- If the supplied Australian standard flex and plug is removed on installation the installing electrical contractor will be liable for any expense incurred for removal of faulty product.
- The downlight must have a clearance of 100mm on all sides to combustible materials (See diagram below).
- Modification to any part of this downlight will void warranty.

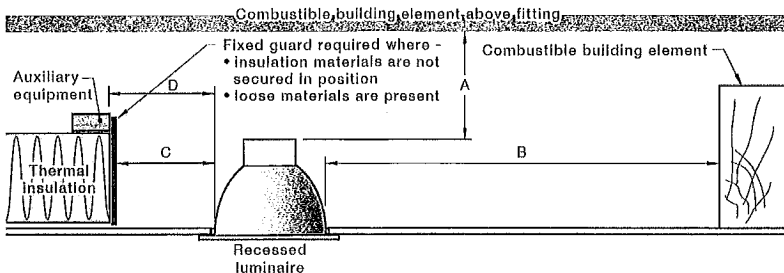

Dimension	Clearance
A – Clearance above luminaire	100 mm
B – Side clearance to combustible building element	100 mm
C – Side clearance to bulk thermal insulation	100 mm
D – Clearance to auxiliary equipment (transformer for example)	50 mm

## Warranty:

This product is guaranteed for a period of 2 years from date of purchase against any defects in materials or workmanship.

This product is supplied with an Australian Standard flex and plug for the express purpose of its Back to Base Warranty, it is the consumers responsibility to return this product to the place of purchase with proof of purchase if thought to be faulty. We will undertake testing of any products returned and will replace items only when proved to be faulty.

The Warranty does NOT cover any electrical costs associated with the replacement of products found to be faulty or any degree of damage caused on replacement.