



Remote Control for NSZ-GS7

Operating Instructions

NOTICE:

Network Media Player (NSZ-GS7) can only be paired with ONE remote. If you pair the player with this remote, the previously paired remote cannot be used.

Sony Customer Support

 
<http://esupport.sony.com/> | 1-800-222-SONY
Please Call Before Returning the Product to the Store

NSG-MR7U

Owner's Record

The model and serial numbers are inside the battery cover. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. NSG-MR7U
Serial No. _____

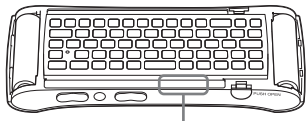

Serial No.

WARNING

Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunshine, fire or the like.

FCC WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC/IC Radiation Exposure Statement:

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Precautions

On placement

- Do not place the remote in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place the remote outdoors, in vehicles, on ships, or on other vessels.
- If the remote is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may form on the outer surface and on interior of the remote. Should this occur, the remote may not operate properly. In this case, leave the remote for about half an hour until the moisture evaporates.
- Do not place the remote in a place where medical equipment is in use. It may cause a malfunction of medical instruments.
- If you use a pacemaker or other medical device, consult your physician or the manufacturer of your medical device before using the remote.
- Do not place heavy or unstable objects on the remote.
- Do not expose this apparatus to rain or moisture. Do not open the cabinet. Refer servicing to qualified personnel only. Do not place objects filled with liquids, such as vases, on the apparatus. They cause a malfunction.
- The nameplate is located inside the battery cover.

 
Trademark Information

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.
- Other system and product names are generally trademarks or registered trademarks of the manufacturers. ™ and ® marks are not indicated in this document.



Getting Started

Inserting the batteries

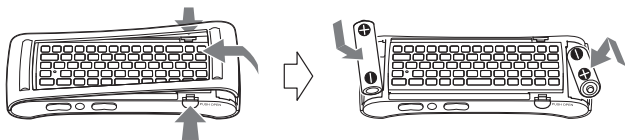


Press **PUSH OPEN**. Hold the right side of the battery cover and slide it to the left. Then, insert the batteries in the correct polarity, replace the battery cover and press the right side down until it clicks.

Pairing the remote

Press the **CONNECT** button located on the bottom of the player, with a thin, sharp object such as the point of a pen, etc., and release it within 3 seconds.

The instructions will appear on the screen. Then, follow the instructions to pair the remote.

 Network Media Player
NSZ-GS7

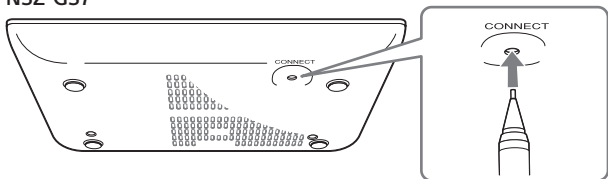

Notes

 
- You need to pair this remote with the Network Media Player (NSZ-GS7) to operate the player using this remote. This remote is not paired by default. Follow the instructions above to pair this remote with the player.
- After finishing this operation, the supplied remote cannot be used with the player. Follow the instructions above to re-pair the supplied remote if you want to use it again.
- The LED on the remote continues to flash after pairing is complete because the remote is connecting with the player. This is not a malfunction. The LED on the remote flashes faster when it starts connecting with the player.

Newly added buttons

MIC

Launches the voice search function.


When speaking into the microphone, keep a distance of about 10 cm (4 inches) away from it.



GUIDE/DVR


Displays the TV Program Guide or the DVR (Digital Video Recorder) screen* of the connected Set Top Box.

 * Press **Fn** (Function) and then press this button to display the DVR (Digital Video Recorder) screen.




Troubleshooting

 
 
The remote does not work.

- Network Media Player (NSZ-GS7) can only be paired with one remote. To operate the player using another remote, pair that remote with the player. See above for instructions on how to pair a remote.
- Update the Network Media Player (NSZ-GS7) software to the latest version.
Press  (HOME) and select [All Apps] - [Settings] - [About] - [System updates] - [Check now].

(MIC) does not work.

- This button may not work in some applications.
- The remote with microphone needs to be paired with the player.
- Update the Network Media Player (NSZ-GS7) software to the latest version.
Press  (HOME) and select [All Apps] - [Settings] - [About] - [System updates] - [Check now].

Cannot find on the remote.

- You can find  on the rear side (keyboard) of the remote.
- To switch to the TV program screen of the connected Set Top Box, press  (HOME) and select [All Apps] - [Live TV]

Specifications

Compatible model:	NSZ-GS7
Dimensions (approx.):	152 mm × 63 mm × 22 mm (6 in. × 2 1/2 in. × 7/8 in.)
Mass (approx.):	103 g (3.7 oz)
Supplied accessories:	Size AA batteries* (2)

* Alkaline batteries. Do not use manganese or lithium batteries when replacing old batteries.

To launch the online "Help Guide"

The Help Guide gives you detailed information on how to use this remote and the player.

From your player

Press  (HOME) and select [All Apps] - [Help Guide]



From your PC or smartphone

You can also access the Help Guide from a PC or smartphone.
<http://www.sony.net/helpguide/r/networkplayer/>

