



- 1 Press and hold the **BD**, **DVD**, or **AMP** function button you want to programme on the remote, then press . The selected function button (**BD**, **DVD**, or **AMP**) flashes.
- 2 Press the number buttons to enter the three-digit manufacturer's code number when the function button flashes. If you do not enter the code within 10 seconds, you need to go back to step 1.
- 3 Press . The selected function button flashes twice. If the selected function button flashes five times, repeat from step 1.
- 4 Turn on your equipment and check that the following main functions work. For Blu-ray disc players, DVD players and DVD/HDD recorders, check: (playback), (stop), (rewind), (fast forward), channel selection. For DVD players and DVD/HDD recorders, check: **TOP MENU/MENU** and .

**If your equipment is not working, or some of the functions do not work**  
Enter the correct code or try the next code listed for the brand. Note that the list may not include codes for all models of all brands.

**To return to normal TV operation**  
Press the **TV** function button.

## Manufacturer's codes

### DVD players

Manufacturer	Code
SONY	001, 029, 030, 036 – 044, 053 – 055

### Blu-ray disc (BD) players

Manufacturer	Code
SONY	101 – 103

### DVD/video cassette recorders

Manufacturer	Code
SONY	251

### DVD/HDD recorders

Manufacturer	Code
SONY	201 – 203

### VCRs

Manufacturer	Code
SONY	301 – 310, 362

### DAV Home Theatre System

Manufacturer	Code
SONY (DAV)	401 – 404

### AV receivers

Manufacturer	Code
SONY	451 – 454

### Digital terrestrial receivers

Manufacturer	Code
SONY	501 – 504