

**ONE**®  
**FOR ALL**

# URC-7110

## Extra Features

English  
Deutsch  
Français  
Español  
Italiano  
Português  
Nederlands  
Polski  
Česky  
Magyar  
Hrvatski  
Slovenský  
Dansk  
Norsk  
Svenska  
Suomi  
Ελληνική  
Русский  
Türkçe  
Română  
Български

• **Key Magic<sup>®</sup>**

Allows you to obtain functions from your LOST or BROKEN original remote control.

page 2

Missing function after Set Up procedure

e.g. Original LOST or BROKEN remote



Key Magic<sup>®</sup>




Obtain your Missing function through our Customer Service requesting a (5-digit) Key Magic<sup>®</sup> function code. Then, simply follow the procedure from page 2.

• **Macro**

Allows you to send a sequence of commands with the press of a single key.

page 3

e.g. Macro on “-/-- key”

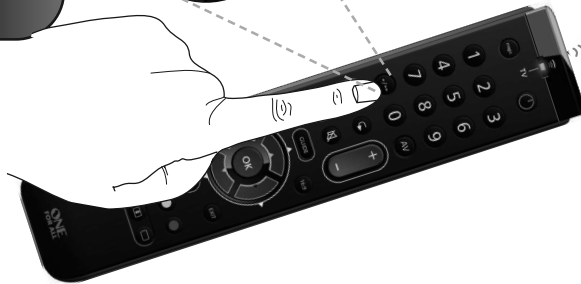

»»» Command 3  
»»» Command 2  
»»» Command 1



**Macro on “-/-- key” =**  
command 1: TV ON  
command 2: AV (EXT 1)  
command 3: AV (EXT 2)

• **What is my “Set Up Code again?”**

Find out which code is currently set under each of the 6 device modes.

page 4

My Code is?



1 5 5 6

1 blink



1st nr. : 1

5 blinks



2nd nr. : 5

5 blinks



3rd nr. : 5

6 blinks



4th nr. : 6

## Key Magic®

Key Magic® is an exclusive ONE FOR ALL feature. The design of the ONE FOR ALL ensures that many functions of your original remote control can be operated - even those that do not have their own key on the ONE FOR ALL keypad. Frequently used functions can be assigned to a key of your choice using the Key Magic® feature of your ONE FOR ALL. In order to program a certain function with Key Magic® you need to know the corresponding function code. As the function codes vary with different types of devices, they cannot be found in the manual. You can request your function codes through our consumer service help-line or by letter, fax or e-mail.

### When you contact us please make sure to mention the following:

- The Current code you are using (see "What is my Set Up Code again?")
- Device-type, Brand & Model-number of the corresponding device.
- Model-number of the original LOST or BROKEN remote control.
- How the function was labeled on your original remote control.

then;

Customer Service will provide you:

- A function-code (5-digit) for every requested function.


Once you obtain your function code(s) from customer service, programming the code is easy:

**Example: How to get the "I/II (mono/stereo)" function from your original LOST or BROKEN remote onto the "red key" on your ONE FOR ALL remote control.**



e.g.  
Original  
LOST  
or  
BROKEN  
remote

1

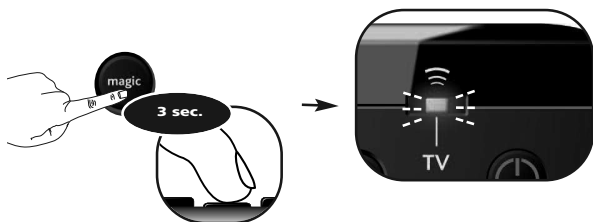

Press and hold magic for 3 seconds until a mode indicator (Blue LED) stays lit.

2



Press 9 9 4.

--> The blue LED will blink twice.

3




Press and release  
the magic key.

4



Enter the 5-digit function-code  
provided by Customer Service.  
(e.g. 00123)

5

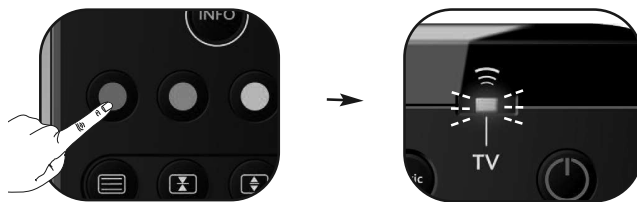

Press the key to which the function will  
be assigned (e.g. red key).

--> The blue LED will blink twice.

**Congratulations! You have successfully programmed the "I/II (mono/stereo)" function from your original remote control onto your ONE FOR ALL remote control. NOW whenever you press the "red key" (in tv mode) you will obtain the "I/II (mono/stereo)" function.**

### How to reset a key to obtain its original function?

- 1) Select the corresponding device mode (e.g. tv).
- 2) Press and hold magic for 3 seconds until a mode indicator (Blue LED) stays lit.
- 3) Press 9 9 4.
- 4) Press the corresponding key (e.g. red) twice.






## Macro

You can program your ONE FOR ALL to issue a sequence of commands at the press of one single key. Any sequence of commands you regularly use can be reduced to one key press for your convenience.

For example, you may want to create a macro that will switch ON your TV and then go directly to EXT 2 for your Playstation.

- 1st command:** TV --> POWER (ON)  
**2nd command:** AV --> EXT 1 (Digital Receiver Box)  
**3rd command:** AV --> EXT 2 (Playstation)


To set up the Macro mentioned above on the e.g. "-/--" key on your ONE FOR ALL:

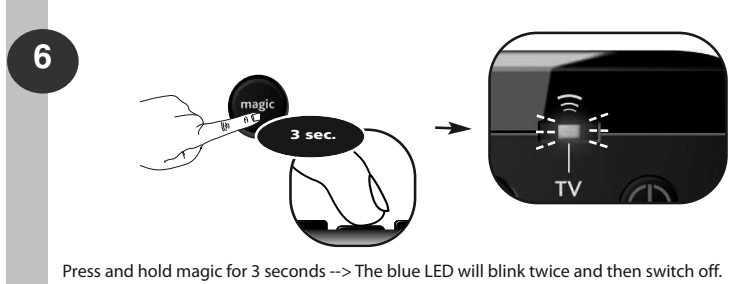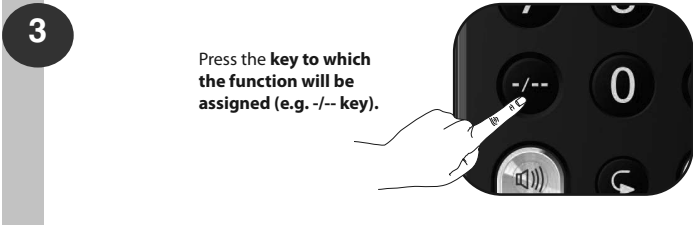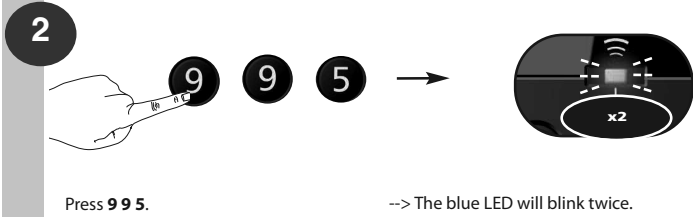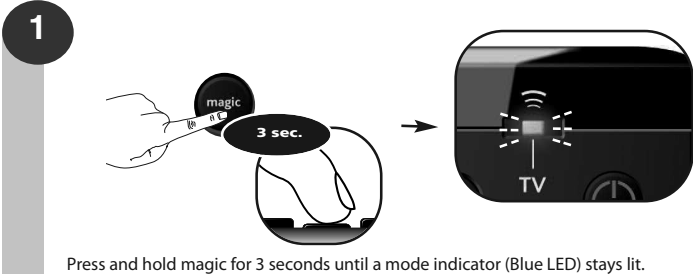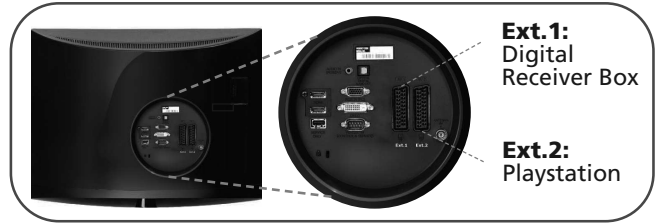

Congratulations! You have successfully programmed a macro on the "-/--" key. NOW, when you press the -/-- key:

- 1st: the TV will switch ON.**  
**2nd: the TV will switch to EXT 1**  
**3rd: the TV will switch to EXT 2.**

The remote will do this in every device mode whenever you press the "-/--" key.

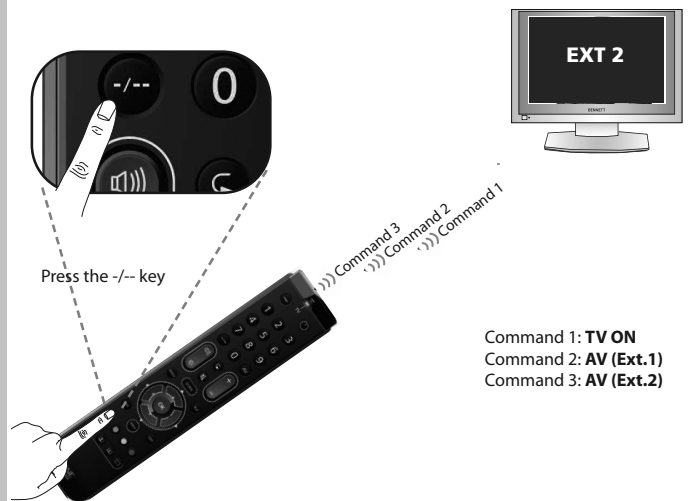

### How to reset the macro key to obtain its original function?

- 1) Press and hold magic for 3 seconds until a mode indicator (Blue LED) stays lit.
- 2) Press 9 9 5.
- 3) Press the corresponding macro key (e.g. the -/-- key).
- 4) Press and hold magic key for 3 sec. --> The blue LED will blink twice.


# What is my "Set Up Code" again?

You either set up your ONE FOR ALL by:

- ONE FOR ALL SimpleSet
- Direct Code Set Up
- Search Method


Example! How to find out which "Set Up Code" is currently set in tv mode:

**1**

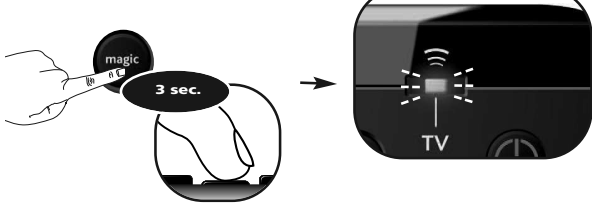


Press and hold magic for 3 seconds until a mode indicator (Blue LED) stays lit.

**2**

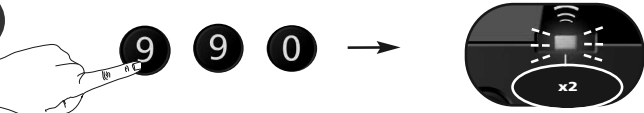


Press **9 9 0**. --> The blue LED will blink twice.

**3**




Press **1** for the 1st digit of your 4-digit set up code and **count how many times the LED blinks**. If the LED does not blink, the digit is "0".

**4**

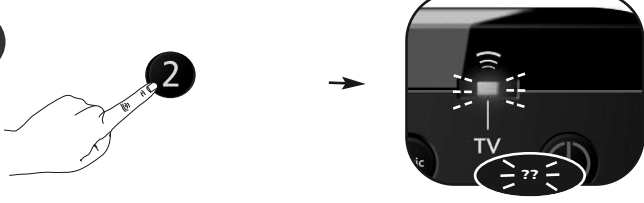


Press **2** for the 1st digit of your 4-digit set up code and **count how many times the LED blinks**. If the LED does not blink, the digit is "0".

**5**



Press **3** for the 1st digit of your 4-digit set up code and **count how many times the LED blinks**. If the LED does not blink, the digit is "0".

**6**

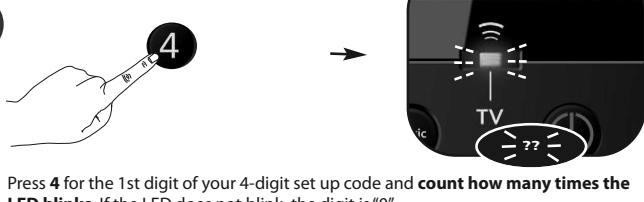

Press **4** for the 1st digit of your 4-digit set up code and **count how many times the LED blinks**. If the LED does not blink, the digit is "0".

Your "Set Up Codes":



**Congratulations! You have successfully blinked out your current Set Up Code in tv mode.**

## Operational Reset

The Operational reset will erase all learned functions across all modes and some other programmed functions like Key Magic and Macros.

- 1) Press and hold magic for 3 seconds until a mode indicator (Blue LED) stays lit.
- 2) Press **9 8 0**. The blue LED will blink twice.