


SONY

Ref. No.			
Subject			
Earpad Repair procedure change			
Model□(System model)	Destination	Serial number	Color
MDR-1R	CE7	ALL	Black
MDR-1R	CN	ALL -	Black
MDR-1RMK2	CN	ALL -	Black
MDR-1R	E	ALL -	Black
MDR-1RMK2	E	ALL -	Black
MDR-1R	UC	ALL -	Black

SYMPTOM

Ear Pad plate is no longer available, needs to be re-used on replacement Ear Pads.

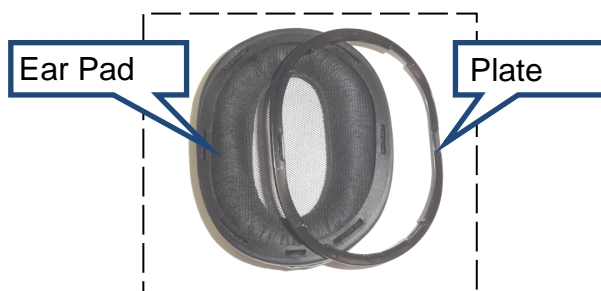

Remove the plate from customer's EAR PAD.


SOLUTION

1. Remove the ear pad from the main unit.

Note: Please work carefully so as not to damage the plate when removing it

EAR PAD ASSY

Note 1: L-ch and R-ch can be similarly disassembled.

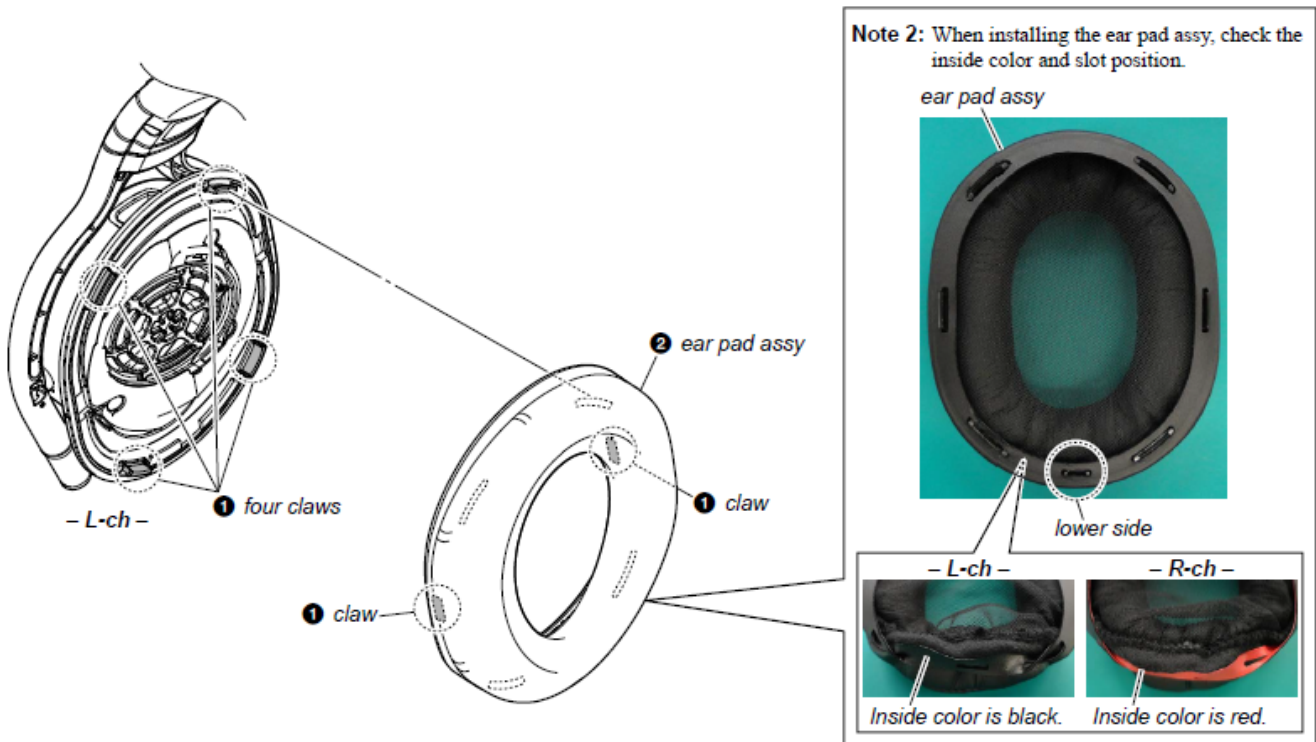

2. Disassemble the ear pad into a cushion and a plate.

Note : Please be careful not to scratch as the plate will be diverted.



3. Attach the removed plate to the new cushion.

Note: Check the engraving of the plate part [L/R] and attach a new cushion part to combine.

Left

L-ch
S0443322001



Check [L]

Divert

Right

R-ch
S0443322101



Check [R]

Divert