



## Replacing procedure:

1. Replace the broken BC-WF1000X (charging case) with a new BC-WF1000X (charging case).

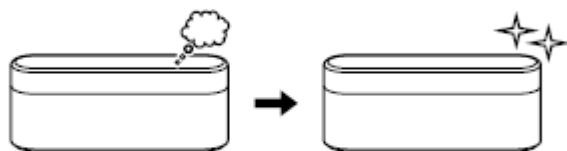

2. Press the [C] button of the WF-1000XL (L-ch) for more than 7 seconds to pairing state, and connect it to the PC with Bluetooth function.

(In order to check the Bluetooth address, it is necessary to connect the PC and the WF-1000XL (L-ch). It is also possible to display the Bluetooth address, by the Bluetooth connect to the walkman (NW-S series or NW-A series etc.) with Bluetooth function. In this example, describes how to display Bluetooth address on PC.)

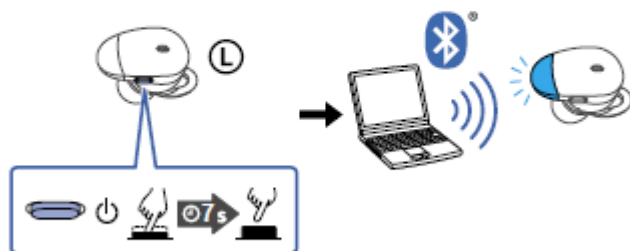


**Note 3:** For the Bluetooth connection method of the PC, refer to the manual of the PC to be used.

3. Display information of this unit Bluetooth connected on the PC screen. Then open the property, display the Bluetooth address of this unit, and take a memorandum the Bluetooth address.


(In the Windows 8.1, open the "Control Panel → Device and Printers" in this order, right click the icon showing the model name (WF-1000X) of this unit and open its properties)

"Device and Printers" screen on PC

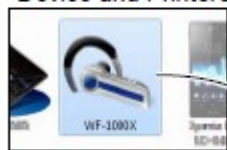

Right click and select the "Properties".

"Properties" screen

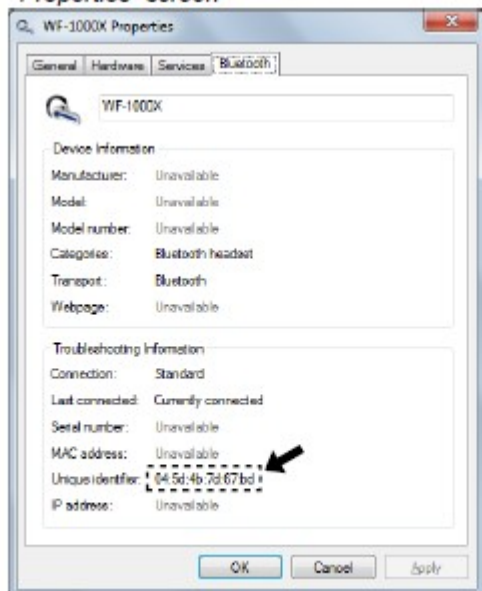

**Note 4:** Check the device name carefully so as not to confuse Bluetooth address with other devices, and take a memorandum.

**Note 5:** The display method of Bluetooth address may be different depending on Windows OS.

4. Write the Bluetooth information to the BC-WF1000X (charging case) using smartphone that installed the NFC Tag Data Writing Application.

(Refer to "BLUETOOTH INFORMATION WRITING METHOD" on page 7)


5. While the power is off, press the buttons of WF-1000XL (L-ch) and WF-1000XR (R-ch) simultaneously for more than 15 seconds as it is.



**Note 6:** If the power is on, press the [C] button on the WF-1000XL (L-ch) for more than 2 seconds to turn the power off.

**Note 7:** While the buttons are pressing, the lamp of WF-1000XL (L-ch) is flashes in the middle, but keep pressing for more than 15 seconds as it is.

6. When the lamps of WF-1000XL (L-ch) and WF-1000XR (R-ch) are switched from flashing red several times to flashing blue 4 times and the lamps are turn off, pairing of WF-1000XL (L-ch) and WF-1000XR (R-ch) are completed.

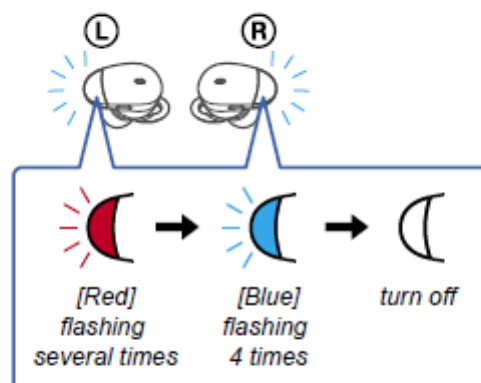

**Note 8:** When perform the this operation, it might not be able to connect to iPhone or PC.

In that case, delete the registration of this unit on iPhone or PC, register the device again.

7. Check the operation of this unit and complete replacement works.